© YORK MANUFACTURING INC.

Reference: WGF-TWF-OC-wDE

1: APPLY TWO CONTINOUS ROWS OF US-100 SEALANT ALONG THE EDGE, AND INSTALL STAINLESS STEEL DRIP EDGE ON TOP OF SEALANT.

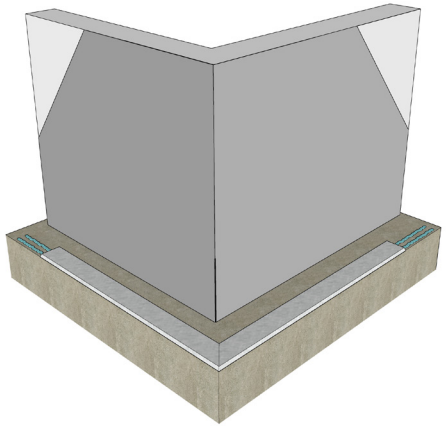

2: APPLY US-100 SEALANT CANT BEADS AT BASE. PLACE PREFORMED OUTSIDE CORNER ON TOP OF US-100 SEALANT.

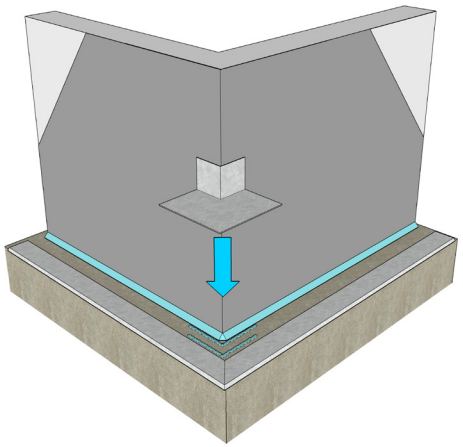

3: SEAL PREFORMED CORNER WITH US-100 SEALANT. LAY WICKED GOOD FLASHING IN PLACE.

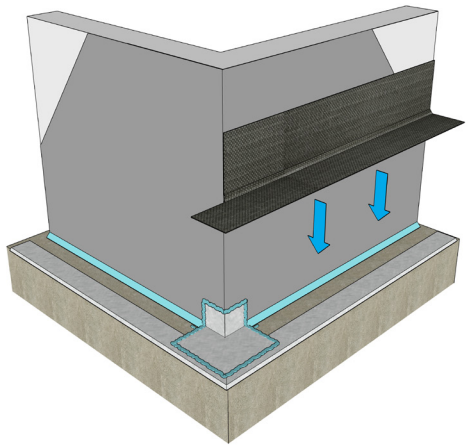

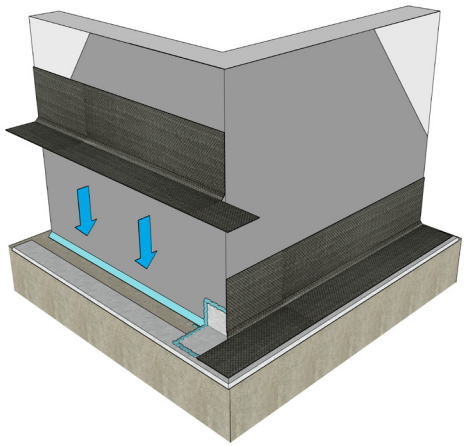

4: REPEAT SEALANT INSTALLATION PER STEP 3. AND PLACE WICKED GOOD FLASHING WITH ONE PIECE OVERLAPPING THE OTHER AS SHOWN. ROLL WICKED GOOD FLASHING WITH HARD ROLLER.

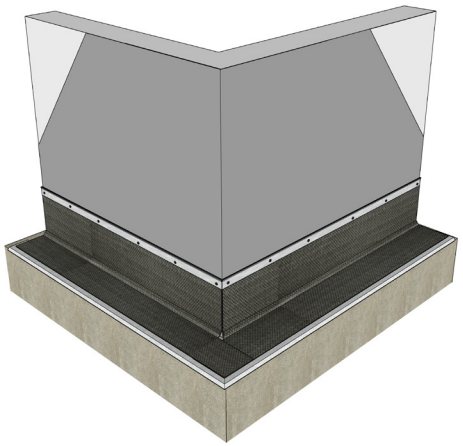

5: INSTALL TERM BAR AND MECHANICALLY FASTEN WITH APPROVED FASTENERS w/ NEOPRENE WASHER @ 8" O.C., AND WITHIN 1" OF EACH END OF BAR.

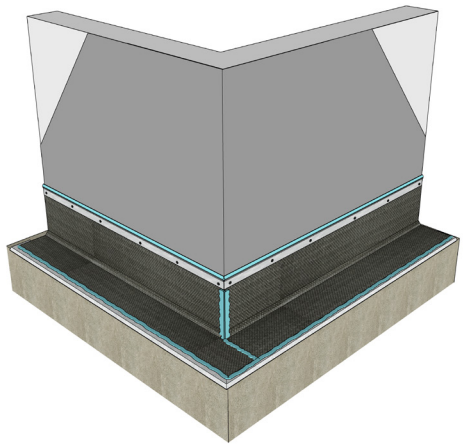

6: APPLY CONTINUOUS BEAD OF US-100 SEALANT ON TOP OF TERMINATION BAR AND TOOL FOR PROPER ADHESION. THEN APPLY US-100 EDGE SEALANT TO DETAIL EDGE OF MEMBRANE @ LAPS AND ENDS.

NOTE: EDGE OF MEMBRANE AND EDGE SEALANT SHOULD BE CONCEALED WITHIN EXTERIOR CLADDING. APPLY MEMBRANE 1" FROM DRIP EDGE.

OUTSIDE CORNER WITH DRIP EDGE DETAIL WICKED GOOD FLASHING

NOTE: DESIGN TEAM IS RESPONSIBLE FOR DESIGN APPLICATION OF YORK FLASHINGS PRODUCTS AND ACCESSORIES. ALL PRODUCTS SHOULD BE USED IN COMPLIANCE WITH LOCAL BUILDING CODES AND INTERNATIONAL CODES OR STANDARDS. YORK PROVIDES THIS DETAIL AS GUIDANCE ONLY AND ACCEPTS NO LIABILITY FOR THE USE OR DUPLICATION OF THIS DETAIL. THE DESIGN TEAM IS RESPONSIBLE FOR THE DESIGN AND, AT THEIR DISCRETION,SHOULD DETERMINE IF THE RECOMMENDED PRODUCT APPLICATION IS SUITED FOR THE PROJECT AND PERFORMANCE DESIRED. THIS DETAIL IS SUBJECT TO MODIFICATION AT THE MANUFACTURER'S DISCRETION WITHOUT NOTICE. FOR THE MOST RECENT VERSION, PLEASE VISIT WWW.YORKFLASHINGS.COM