No-Bow Termination Strip
Installation Instructions

1:

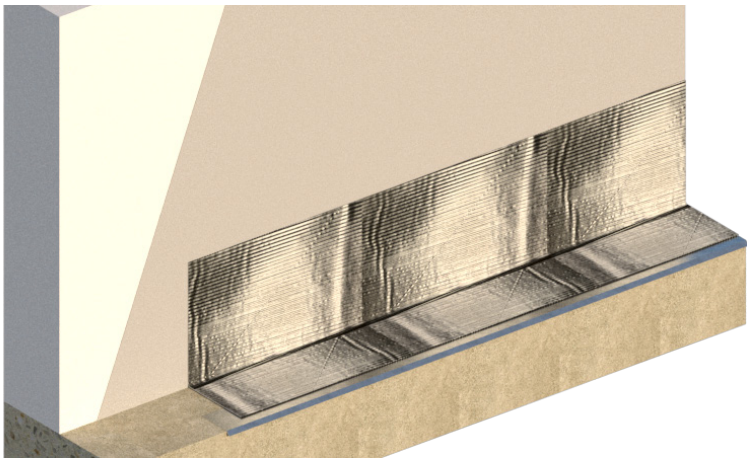

Choose and install your flashing per manufacturers installation instructions.

2:

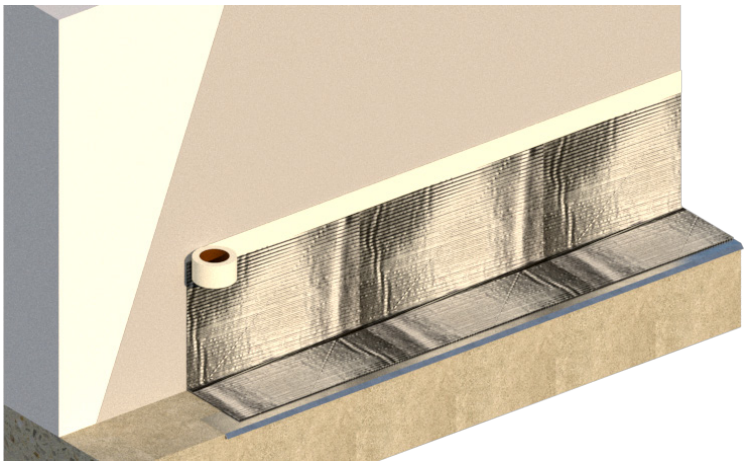

Remove the release liner and place 1” of the Termination Strip on the flashing and the other 1” on the backup substrate.
(Roll the termination bar with a hard roller)

3: Install fasteners through the Termination Strip, puncturing through the facer of the flashing.
(Install fasteners per BIA spacing recommendations)

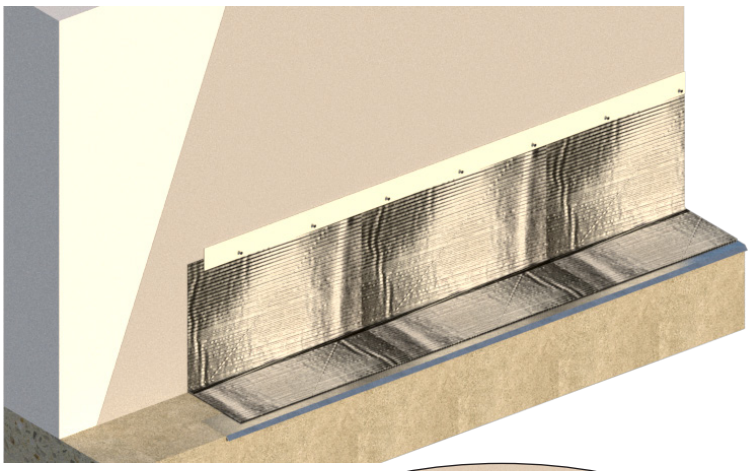

Fasteners must be installed ½” from the bottom of the termination strip

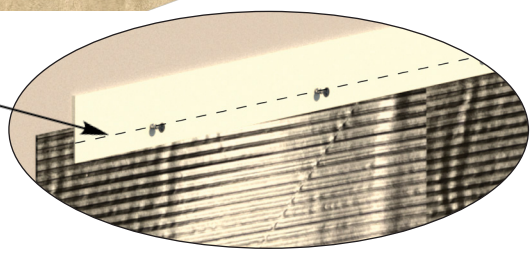

4: Apply a compatible sealant at the top of the termination bar.

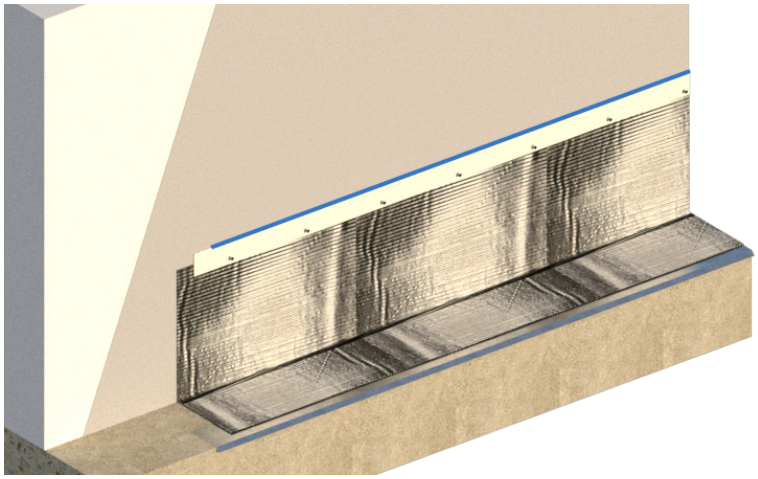

Optional: Place sealant around fastener holes

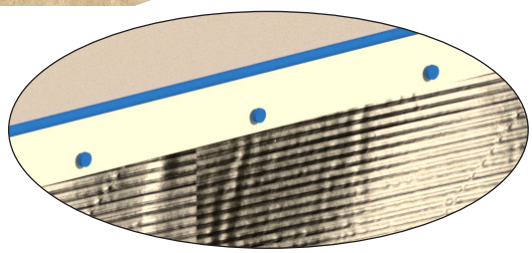

YORK Flashings™